

SUGGESTIONS FOR USING CASSETTES FOR CONGREGATIONAL SINGING


BEFORE THE SONG IS ANNOUNCED PREPARE THE CASSETTE AS FOLLOWS:

1. Place the cassette into the player with the desired song facing *out*. Make sure it is rewind.
2. There will be approximately 8-10 seconds lead-in time before the program begins. To shorten this waiting time when the song is announced, advance the tape 5 or 6 seconds, then stop. When the song is called for, start the cassette. The music will begin in 3 to 5 seconds.
3. When the program ends, remove the cassette from the player, and return it to its proper pocket in the album, with the *odd* number facing *out*.

TAKE CARE OF YOUR TAPE PLAYER

With a cotton swab lightly moistened with isopropyl alcohol, periodically clean all parts that the tape touches—record head, erase head, capstan and pinch roller, etc.

SUGGESTED METHOD OF CONNECTING STEREO CASSETTE PLAYER TO MONAURAL SOUND SYSTEM

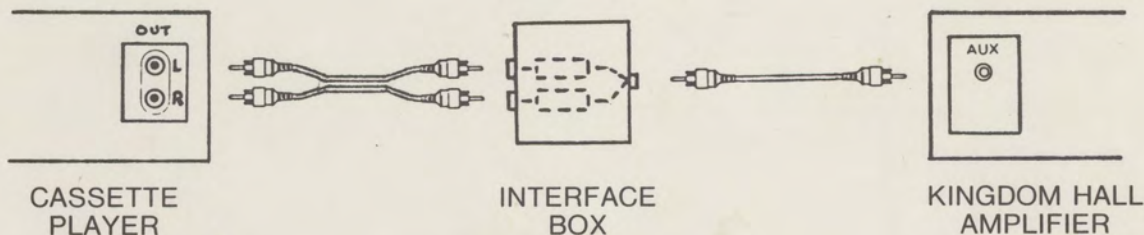

TYPICAL PARTS FOR INTERFACE BOX

1. Aluminum box: 2-3/4" × 2-1/8" × 1-5/8" (or similar size)
2. Two 10,000 ohm, 1/4-watt resistors
3. Three chassis-mount phono jacks